




Asus X200MA Fan Replacement

Written By: Vanessa Garcia



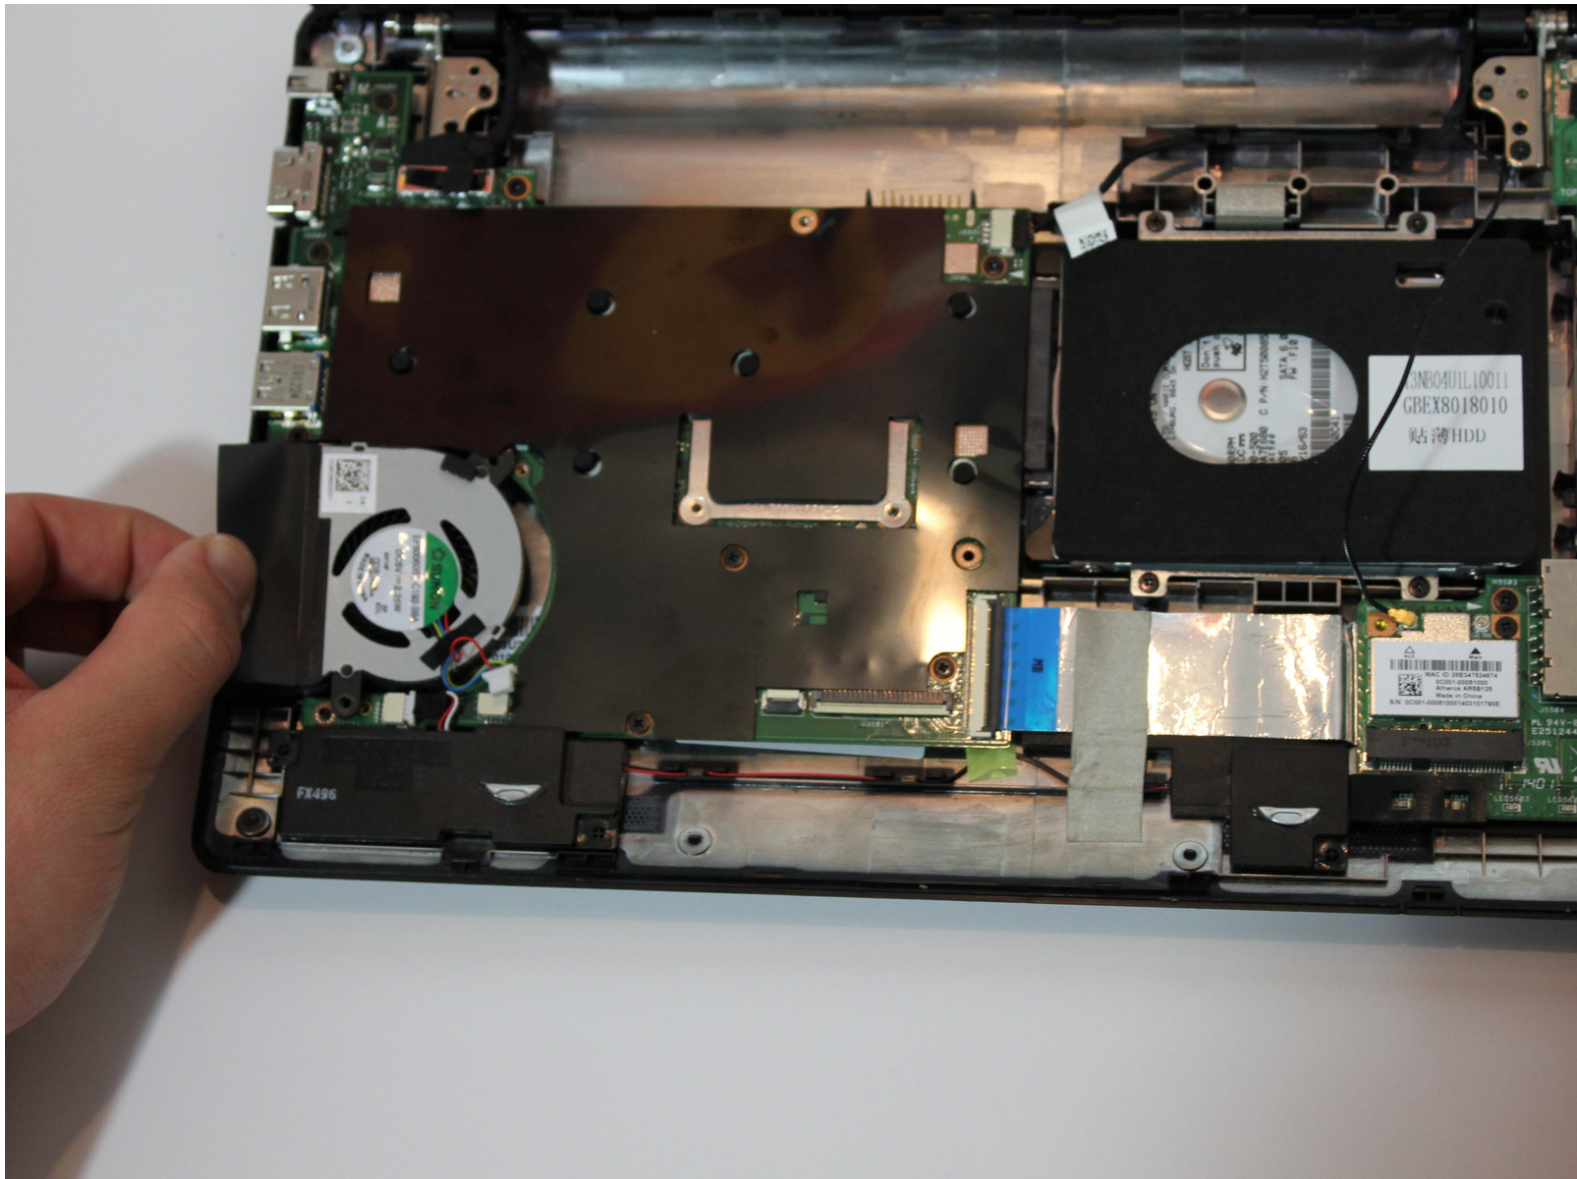

TOOLS:

- [Phillips #0 Screwdriver](#) (1)
-

Step 1 — Back Panel



- Remove the following six screws:
 - Six 4 mm Phillips #0 using a phillips screddriver
 - Remove the following one screw:
 - One 14 mm Phillips #0 using a phillips screwdriver
- ☒ The 14mm screw goes in the center.

Step 2



- Use a plastic or metal spudger to separate the keyboard from the back panel and lift the keyboard out of place.

Step 3 — Battery



- Take two rubber caps off the back side of the laptop.

Step 4




- Remove the following two screws under the rubber caps.
- Two 14 mm screws using the Phillips #0 screw driver.

Step 5




- Remove the following screws from the inside of the laptop:
 - Two 4 mm screws using Phillips #0 phillips screwdriver.
 - One 5 mm screw using Phillips #0 phillips screwdriver located in the center a little below the battery.

Step 6

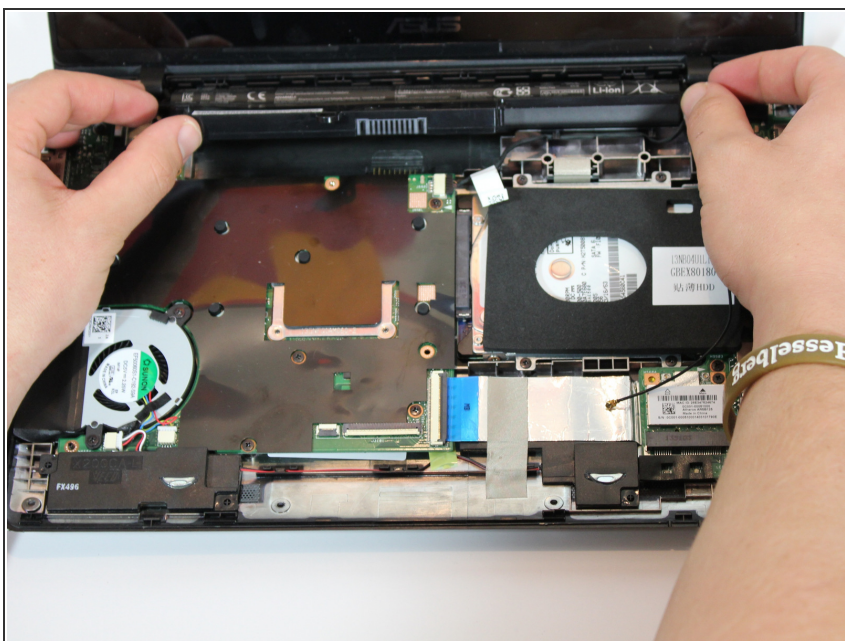


- Slide the battery up and out.

Step 7 — Fan

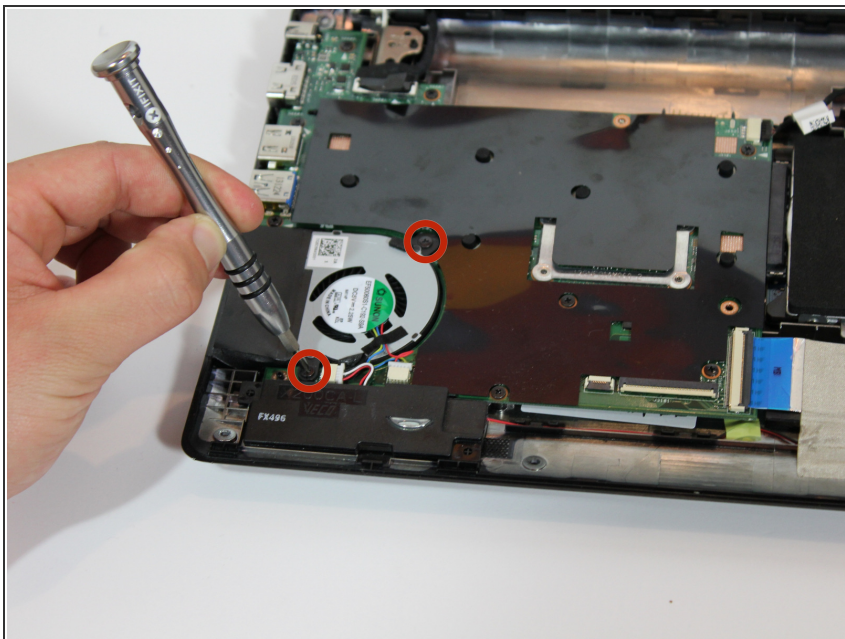


- Remove the Two 4 mm screws using Phillips #0 phillips screwdriver.

Step 8

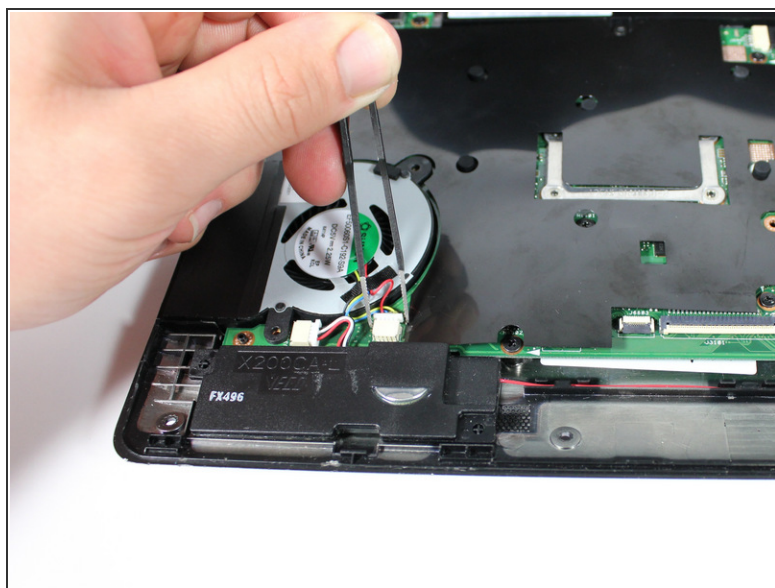


- Unplug the set of wires located at bottom corner on fan.

Step 9

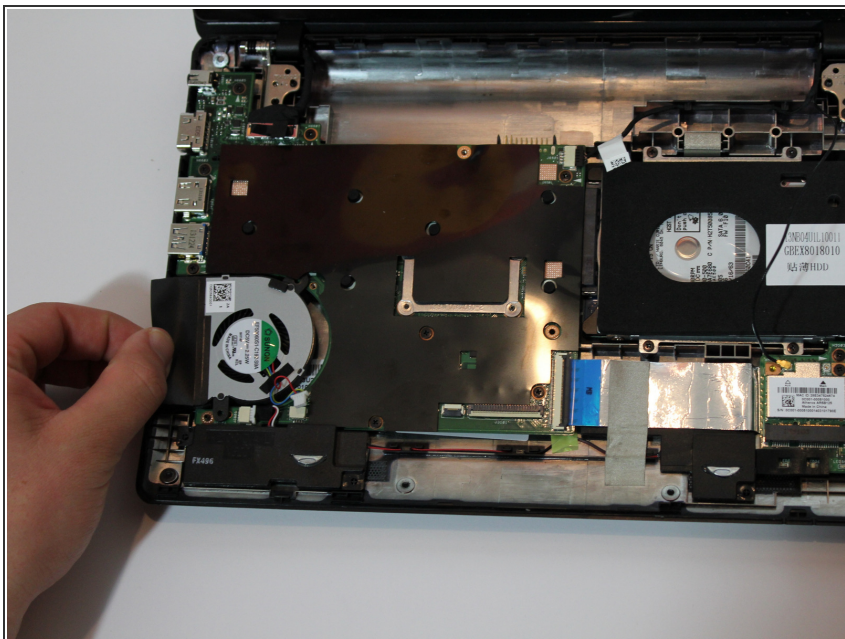

- Slide the fan out but not all the way just yet.

Step 10

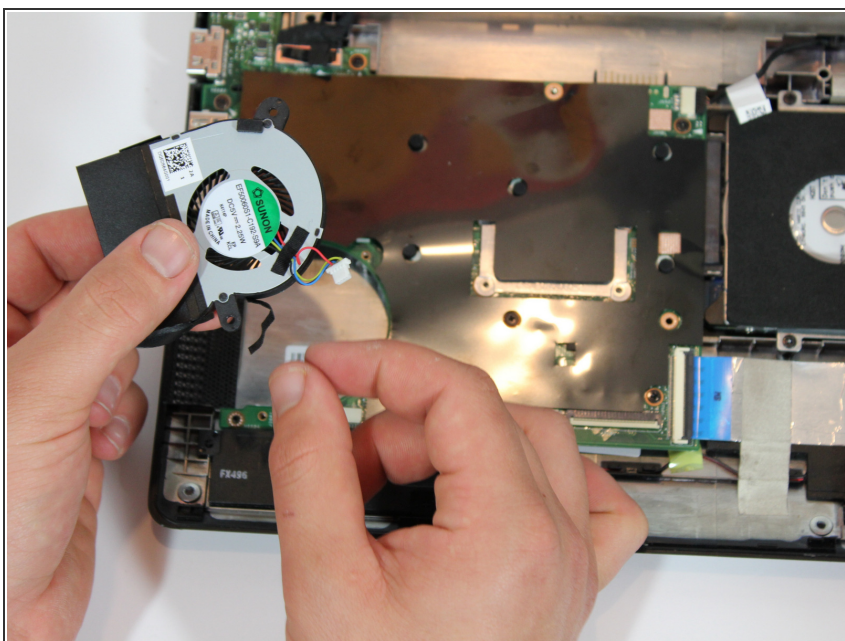

- Lift up and out to completely remove fan component.

To reassemble your device, follow these instructions in reverse order.